



Part Number 57-0364

Fiat Punto 60 1242cc 8v Spi. May'97 - Oct'99

Instruction Sheet No.A2054-387 FILTER CHARGER® INJECTION PERFORMANCE KIT

INSTALLATION INSTRUCTIONS

Parts list:

- 1 x Filtercharger element.
- 1 x Hose Clip.(filter)
- 1 x Rubber Breather Hose.
- 1 x Flexi Cold Air Hose.
- 2 x Molded Plastic Sleeves.
- 1 x Literature Pack.
- 1 x Fixing Kit :-
 - 1 x #10 Hose Clip.
 - 1 x #16 Hose Clip.
 - 1 x #4 Hose Clip.
 - 3 x Long Plastic Ties.
 - 1 x Plastic Adapter, Straight.
 - 1 x Plastic Adapter, Elbow.

1. Unclip & remove the air box feed pipe from the inner wing. (Fig. 1)
2. Remove the small breather hose from the rear of the air box. Unclip & remove the large engine breather hose from the cam cover. (Fig. 2)
3. Remove the 2 nuts securing the air box to the throttle housing. (Fig. 3)
4. Release the clip securing the front of the air box, remove the flexi hose from between the air box & exhaust manifold. (Fig. 4)
5. Carefully remove the complete air box assembly from the vehicle. (Fig. 5)
6. Remove the 2 air box support pillars from the throttle housing. (Fig. 6)
7. Remove the large rubber seal from the throttle housing, remove any excess grease using a clean cloth. (Fig. 7)
8. Fit the new breather hose to the cam cover & secure using a #16 hose clip supplied. Fit the plastic adapter elbow into the end of the breather hose & secure using a #10 hose clip supplied. (Fig. 8)
9. Fit the straight plastic adapter into the end of the original small breather hose & secure using a #4 hose clip supplied. (Fig. 9)
10. Install the new **Filtercharger** element onto the throttle housing using the hose clip supplied, ensuring that the K&N logo on the lid is straight. (Fig.10)
11. Insert the plastic breather adapters into the holes in the base of the filter. Taking all necessary safety precautions as per manufacturers instructions raise the front of the vehicle. Remove the 3 bolts securing the plastic trim to the side of the radiator & carefully remove the trim from the vehicle. (Fig.11)
13. Carefully lengthen the flexi cold air hose, feed the hose down the side of the radiator to the lower grille, secure the hose to the lower grille using a plastic tie supplied.
14. Position the top of the cold air hose to finish approx. 10cm / 4" from the **Filtercharger** & secure the hose using a plastic tie supplied. (Fig.11)
15. Installation is now complete.

*WARNING: Before starting the engine carry out a final fitment check of the K&N performance kit. It will be necessary for all intake systems to be checked periodically for realignment, clearance and tightening of all connections. Failure to follow the above instructions. or proper maintenance may void warranty



Fig. # 1



Fig. # 2



Fig. # 3



Fig. # 4



Fig. # 5



Fig. # 6



Fig. # 7



Fig. # 8

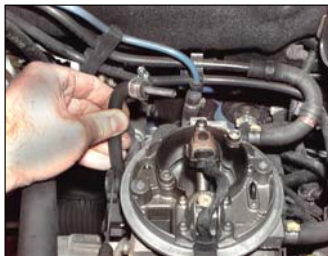


Fig. # 9



Fig. # 10



Fig. # 11



Fig. # 12