



Part Number 57-0414

INSTALLATION INSTRUCTIONS

Fiat Seicento 1.1mpi 8v 4cyl 54bhp Oct'00 On....



1. Unclip the air box intake hose from the slam panel. (Fig. 1)
2. Remove the clip from the front of the air box. (Fig. 2)
3. Unscrew the air box mounting bolts and carefully lift the air box assembly. (Fig. 3 & 4)
4. Detach the breather hose from the air box base and remove the complete air box from the vehicle. (Fig. 5)
5. Insert the plastic elbow into the breather hose. (Fig. 6)
6. Insert the plastic elbow into the small hole in the filter base. (Fig. 7)
7. Fit the filtercharger onto the throttle housing and firmly tighten the clip. (Fig. 8)
8. Carefully expand the flexi cold air hose and pierce/drill 2 holes in one of the plastic ends.
9. Feed the flexi cold air hose down to the front lower grill and secure using 2 of the plastic ties supplied. (Fig. 9)
10. Position the other end of the flexi hose approximately 4" / 10cm away from the filter and secure using the ties supplied. (Fig. 10)
11. Carry out a final height / alignment check of the K&N induction kit, Installation is now complete.

Parts list:

- 1 x **Filtercharger** Element.
- 1 x Cold Air Hose Assembly
- 1 x Literature Pack.
- 1 x Fixing Kit :-
 - 1 x #44 Hose Clip.
 - 1 x Black Plastic Elbow.
 - 4 x Plastic Ties.

WARNING: Before starting the engine carry out a final fitment check of the K&N performance kit. It will be necessary for all intake systems to be checked periodically for realignment, clearance and tightening of all connections. Failure to follow the above instructions or proper maintenance may void the warranty.

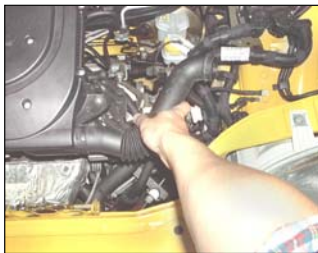


Fig. # 1



Fig. # 2



Fig. # 3



Fig. # 4



Fig. # 5



Fig. # 6



Fig. # 7



Fig. # 8



Fig. # 9



Fig. # 10

